


Mounting with mounting angle

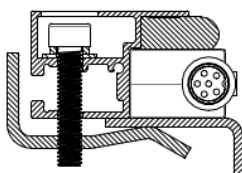

No.	Part Name	Qty
1	Door panel	
2	InfoLight edge	2
3	M4X20 Hex socket cylindrical head screw	6
4	M4 spring washer	6
5	M4 washer	6
6	Mounting angle	6
7	ST3.5X20 cross-slot pan-head self-tapping screw	2
8	ST3.5X25 cross-slot pan-head self-tapping screw	2
9	cegard/Smart light curtain edge	
10	Double-sided tape on the bottom	2



Mount light curtain to InfoLight edge:

1. Glue double sided tape on the backside of the cegard/Smart light curtain edge to the centre of the length.
2. Position cegard/Smart light curtain edge on the InfoLight edge.
3. Screw light curtain to InfoLight edge at top end using the ST3.5X20 cross-slot pan-head self-tapping screw (D; 7).
4. Screw light curtain to InfoLight edge at bottom end using the ST3.5X25 cross-slot pan-head self-tapping screw (C; 8).


Mount InfoLight edge with light curtain to the door:

5. Fix the three mounting angles to the InfoLight edge. (Use M4x20 Hex Socket cylindric head screw and pass it through the M4 spring washer and then through the M4 washer). Do not tighten the screws.
6. Position InfoLight edge at the door of the elevator and tighten the three M4x20 Hex Socket cylindric head screws (1.0 ... 1.3 Nm).

Proceed with the same mounting method for the second InfoLight edge.

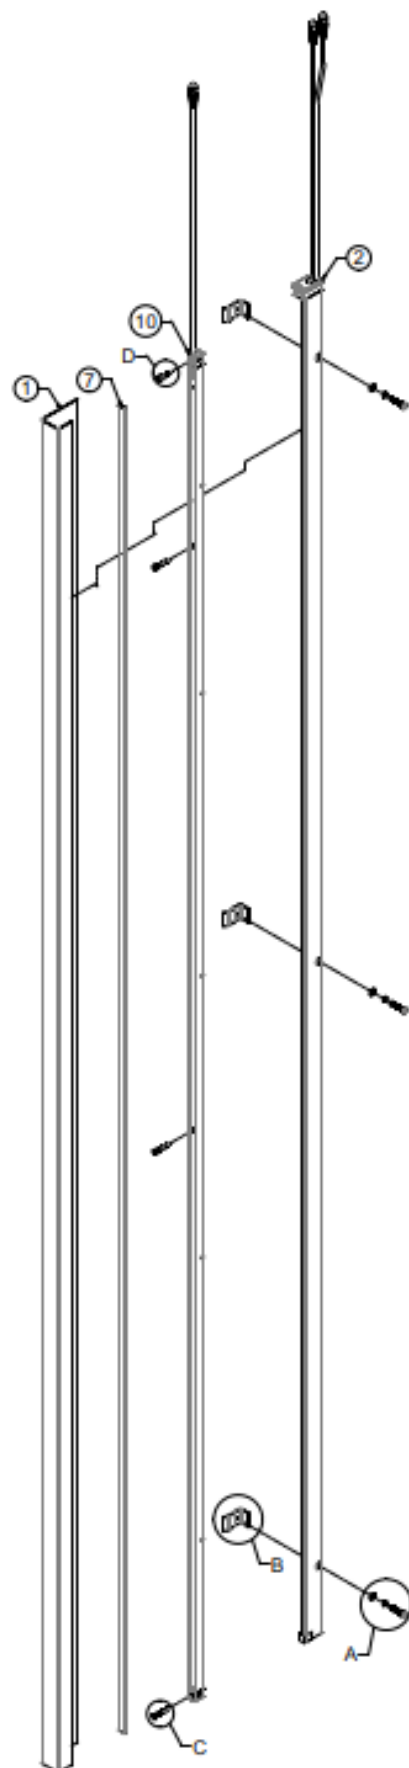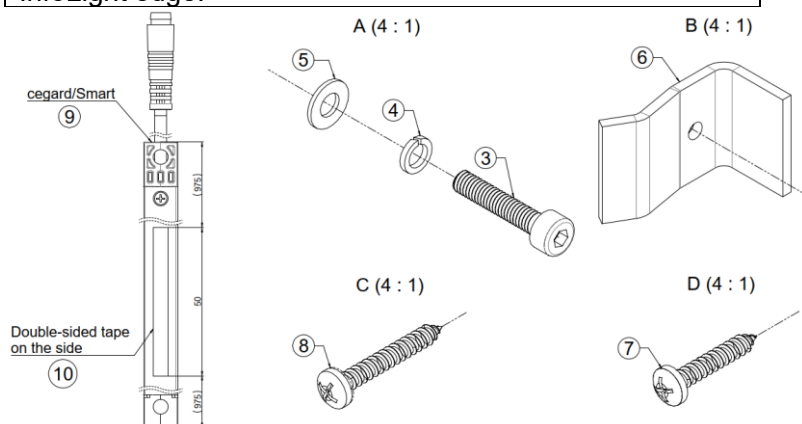

Mounting direct to door panel

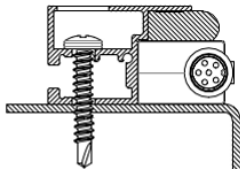



No.	Part Name	Qty
1	Door panel	
2	InfoLight edge (Not including cegard/Smart)	2
3	ST3.5X32 cross-slot pan-head self-drilling self-tapping screw	6
4	ST3.5X20 cross-slot pan-head self-tapping screw	2
5	ST3.5X25 cross-slot pan-head self-tapping screw	2
6	cegard/Smart light curtain edge	
7	Double-sided tape on the bottom	2

Mount light curtain to InfoLight edge:

1. Glue double sided tape on the backside of the cegard/Smart light curtain edge to the centre of the length.
2. Position cegard/Smart light curtain edge on the the InfoLight edge.
3. Screw light curtain to InfoLight edge at top end using the ST3.5X20 cross-slot pan-head self-tapping screw (B; 4)
4. Screw light curtain to InfoLight edge at bottom end using the ST3.5X25 cross-slot pan-head self-tapping screw (C; 5).

Mount InfoLight edge with light curtain to the door:

5. Position InfoLight edge at the door panel of the elevator.
 6. Drill and tighten the three ST3.5X32 cross-slot pan-head self-drilling self-tapping screw (A; 3) to the door panel.
- Proceed with the same mounting method for the second InfoLight edge.

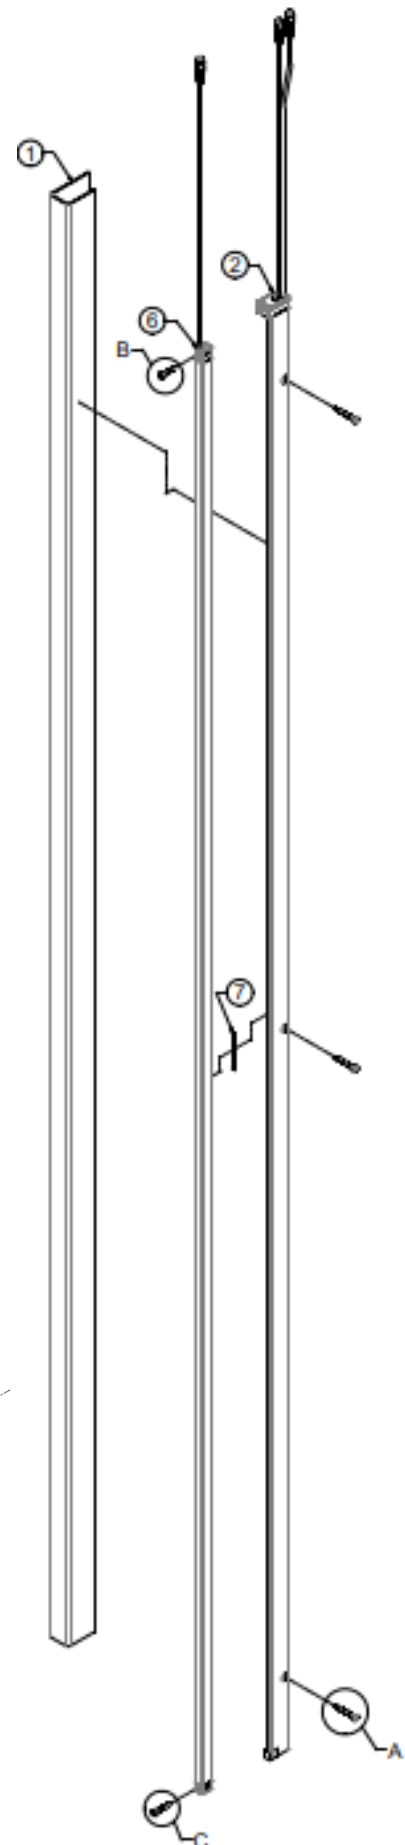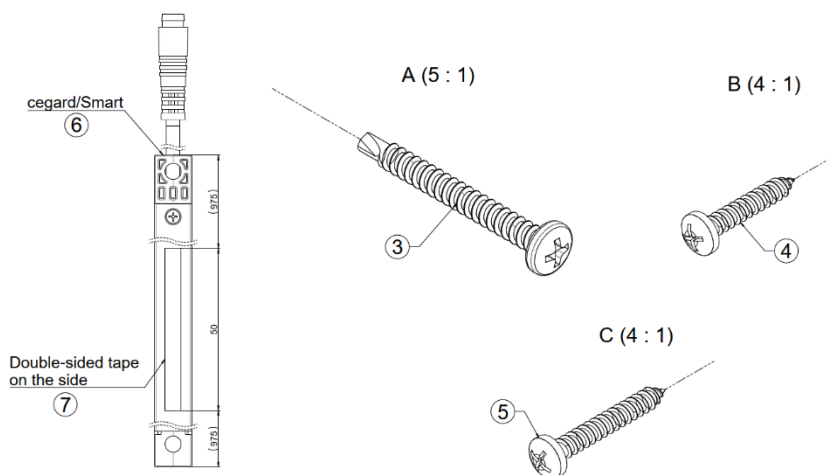

Wiring:


Each InfoLight edge has two black M8 connectors:

Transmitter (Tx):

- Connect the black female plug of the InfoLight edge with the white male plug of the light curtain and
- connect the black male connector of the InfoLight edge with the white female M8 plug of the connection cable.

Receiver (Rx):

- Connect the black female plug of the InfoLight edge with the blue male plug of the light curtain and
- connect the black male connector of the InfoLight edge with the blue female M8 plug of the connection cable.

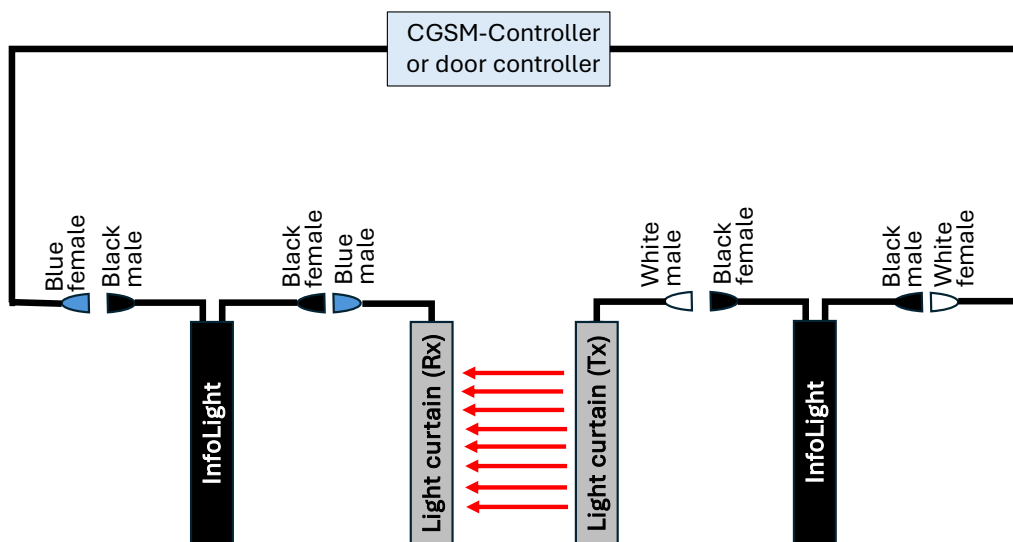

Please refer to the CEDES document


- 118 748 Operating manual cegard/Smart NT
for connecting a cegard/Smart NT light curtain to a door control unit.



Installation hint:

Do not connect the two black connectors together !

Befestigung mit Montage-Winkel

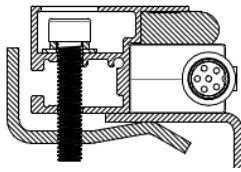

Nr.	Teile Bezeichnung	Anz
1	Türblatt	
2	InfoLight-Leiste	2
3	M4X20 Zylinderschraube mit Innensechskant	6
4	M4 Federunterlegscheibe	6
5	M4 Unterlegscheibe	6
6	Befestigungs-Winkel	6
7	ST3.5X20 Kreuzschlitz-Blechschaube	2
8	ST3.5X25 Kreuzschlitz-Blechschaube	2
9	cegard/Smart Lichtvorhang-Leiste	
10	Doppelseitiges Klebeband auf der Rückseite	2



Lichtvorhang-Leiste an der InfoLight Leiste befestigen:

1. Doppelseitiges Klebeband auf die Rückseite des cegard/Smart-Lichtvorhangs kleben (Mitte der Leistenlänge).
2. Lichtvorhangleiste auf der InfoLight-Leiste positionieren.
3. Lichtvorhang-Leiste am oberen Ende der InfoLight-Leiste festschrauben (ST3,5X20 Kreuzschlitz-Blechschaube mit Linsenkopf (D; 7))
4. Lichtvorhang-Leiste mit der InfoLight-Leiste am unteren Ende verschrauben (ST3.5X25 Kreuzschlitz-Blechschaube mit Linsenkopf (C; 8)).


Befestigung der InfoLight-Leiste mit Lichtvorhang an der Tür:

5. Die drei Montagewinkel an der InfoLight-Leiste befestigen. Dazu die M4x20 Zylinderschraube (A;3) mit Innensechskant durch die M4-Federscheibe (A;4) und dann durch die M4 Unterlegscheibe (A;5) führen. Die Schrauben noch nicht festziehen.
6. Die InfoLight-Leiste an der Aufzugstür positionieren und dann die drei M4x20 Zylinderschrauben mit Innensechskant anziehen (1.0 ... 1.3 Nm).

Die Montage für die zweite InfoLight-Leiste wiederholen.

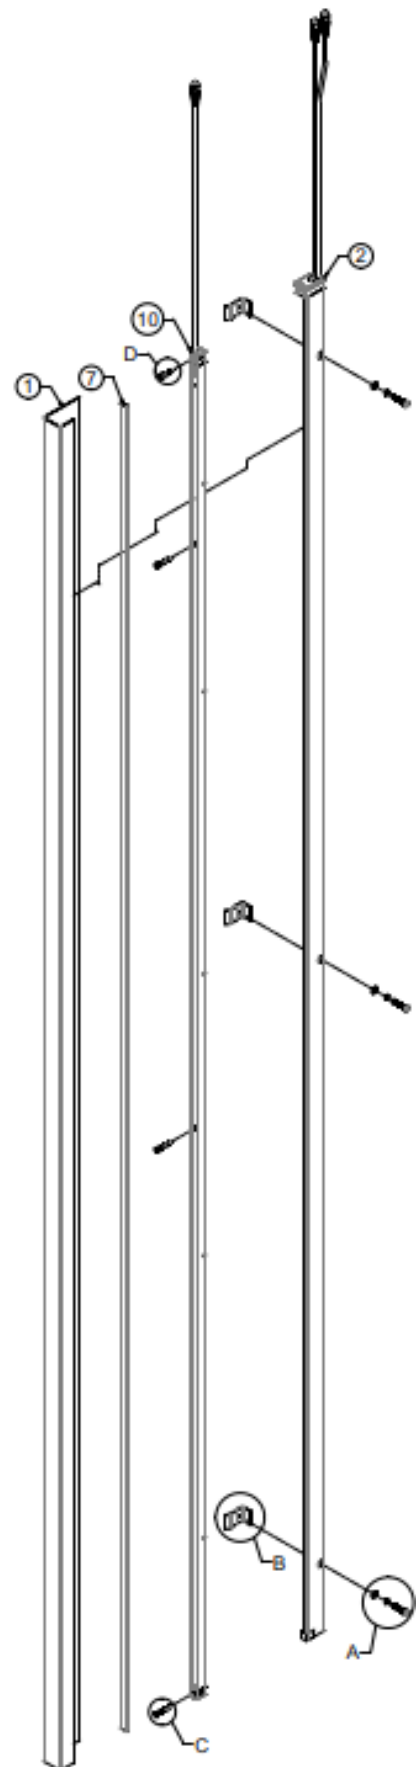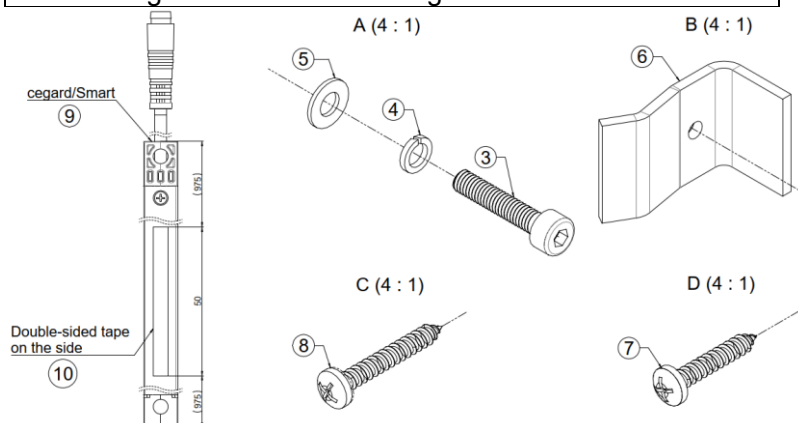

Montage direkt am Türblatt

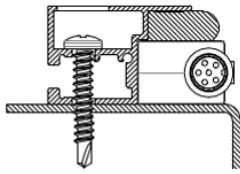

Nr.	Teile Bezeichnung	Anz
1	Türblatt	
2	InfoLight Leiste (ohne cegard/Smart-Leiste)	2
3	ST3.5X32 Kreuzschlitz-Blechschaube	6
4	ST3.5X20 Kreuzschlitz-Blechschaube	2
5	ST3.5X25 Kreuzschlitz-Blechschaube	2
6	cegard/Smart Lichtvorhang-Leiste	
7	Doppelseitiges Klebeband auf der Rückseite	2



Lichtvorhang-Leiste an der InfoLight Leiste befestigen:

1. Doppelseitiges Klebeband auf die Rückseite des cegard/Smart-Lichtvorhangs kleben (Mitte der Leistenlänge).
2. Lichtvorhangleiste auf der InfoLight-Leiste positionieren.
3. Lichtvorhang-Leiste am oberen Ende der InfoLight-Leiste festschrauben (ST3,5X20 Kreuzschlitz-Blechschaube mit Linsenkopf (D; 7))
4. Lichtvorhang-Leiste mit der InfoLight-Leiste am unteren Ende verschrauben (ST3.5X25 Kreuzschlitz-Blechschaube mit Linsenkopf (C; 8)).

Befestigung der InfoLight-Leiste mit Lichtvorhang an der Tür:

1. Die InfoLight-Leiste am Türblatt positionieren
2. Bohren und die drei ST3,5X32 selbstschneidenden Kreuzschlitz-Blechschauben mit Linsenkopf (A; 3) in das Türblatt festziehen

Die Montage für die zweite InfoLight-Leiste wiederholen.

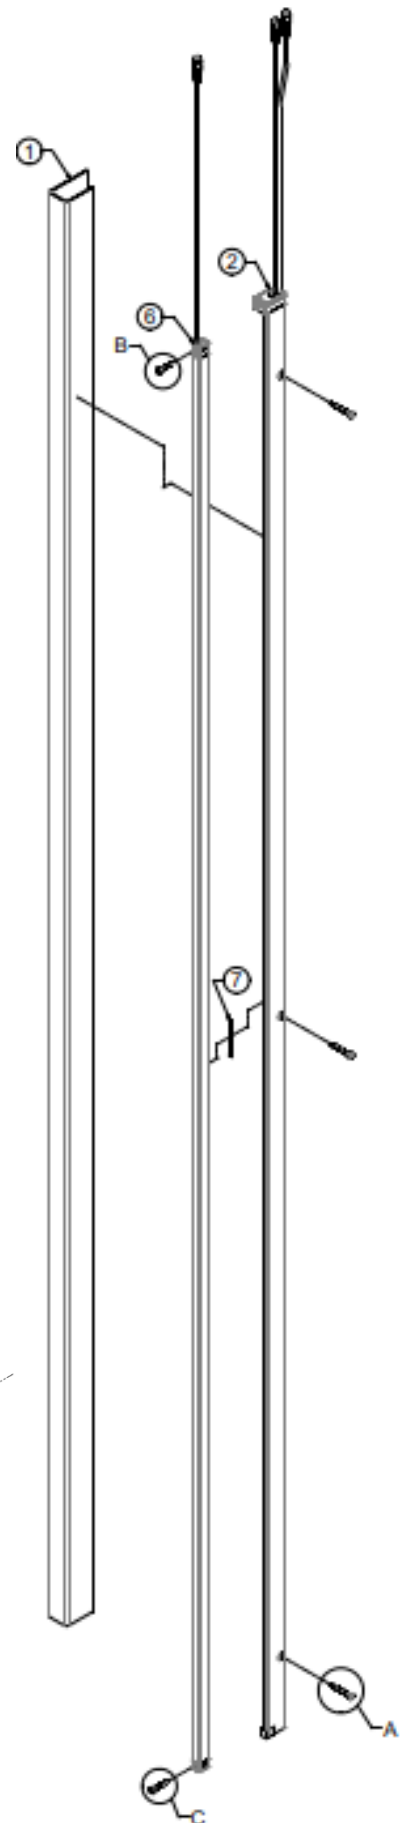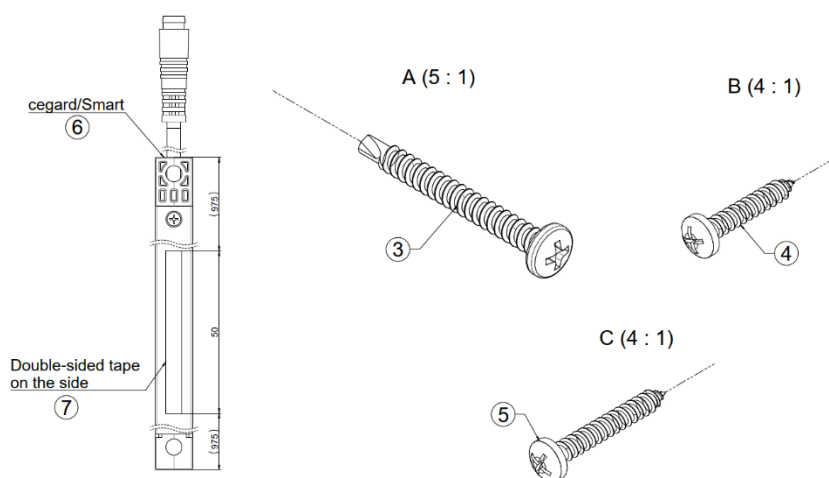

Anschluss:


Jede InfoLight-Leiste hat zwei schwarze M8-Stecker:

Sender:

- den schwarzen Stecker (weiblich) der InfoLight Leiste mit dem weissen Stecker (männlich) des Lichtvorhangs verbinden und
- den schwarzen Stecker (männlich) der InfoLight-Leiste mit dem weissen Stecker (weiblich) des Anschlusskabels verbinden.

Empfänger:

- den schwarzen Stecker (weiblich) der InfoLight Leiste mit dem blauen Stecker (männlich) des Lichtvorhangs verbinden und
- den schwarzen Stecker (männlich) der InfoLight-Leiste mit dem blauen Stecker (weiblich) des Anschlusskabels verbinden.

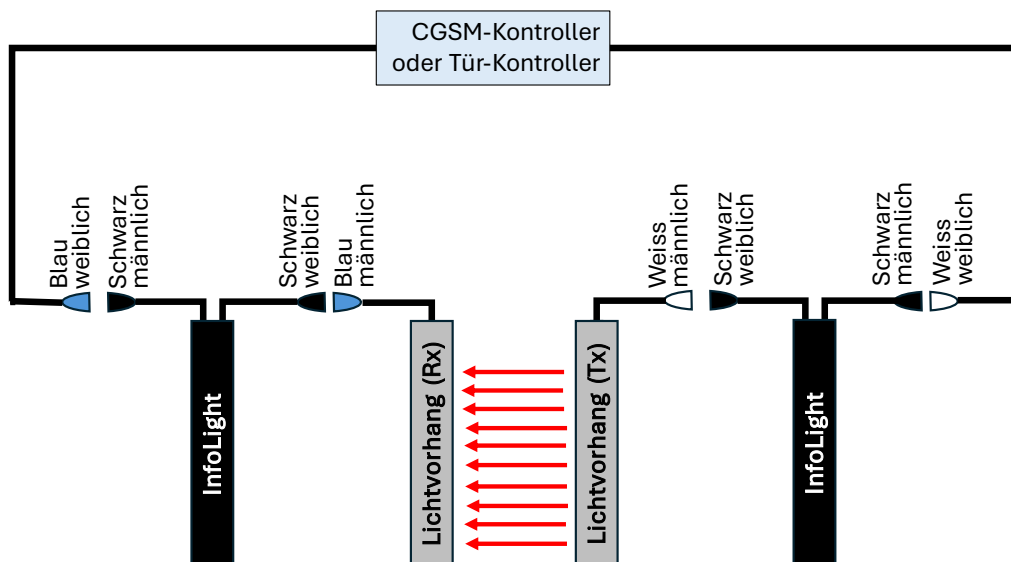

Bitte beachten Sie das CEDES-Dokument

- 118 748 Operating manual cegardSmart NT

für den Anschluss eines cegard/Smart NT Lichtvorhangs an eine Türsteuerung.



Installationshinweis:

Nicht die beiden schwarzen Stecker einer InfoLight miteinander verbinden!